#### § 91.221

procedures for the use of the altitude alerting system or device and each flight crewmember must comply with those procedures assigned to him.

- (d) Paragraph (a) of this section does not apply to any operation of an airplane that has an experimental certificate or to the operation of any airplane for the following purposes:
- (1) Ferrying a newly acquired airplane from the place where possession of it was taken to a place where the altitude alerting system or device is to be installed.
- (2) Continuing a flight as originally planned, if the altitude alerting system or device becomes inoperative after the airplane has taken off; however, the flight may not depart from a place where repair or replacement can be made.
- (3) Ferrying an airplane with any inoperative altitude alerting system or device from a place where repairs or replacements cannot be made to a place where it can be made.
- (4) Conducting an airworthiness flight test of the airplane.
- (5) Ferrying an airplane to a place outside the United States for the purpose of registering it in a foreign country.
- (6) Conducting a sales demonstration of the operation of the airplane.
- (7) Training foreign flight crews in the operation of the airplane before ferrying it to a place outside the United States for the purpose of registering it in a foreign country.

# §91.221 Traffic alert and collision avoidance system equipment and use.

- (a) All airspace: U.S.-registered civil aircraft. Any traffic alert and collision avoidance system installed in a U.S.-registered civil aircraft must be approved by the Administrator.
- (b) Traffic alert and collision avoidance system, operation required. Each person operating an aircraft equipped with an operable traffic alert and collision avoidance system shall have that system on and operating.

#### §§ 91.223—91.299 [Reserved]

## Subpart D—Special Flight Operations

SOURCE: Docket No. 18334, 54 FR 34308, Aug. 18, 1989, unless otherwise noted

#### §91.301 [Reserved]

### §91.303 Aerobatic flight.

No person may operate an aircraft in aerobatic flight—

- (a) Over any congested area of a city, town, or settlement;
- (b) Over an open air assembly of persons:
- (c) Within the lateral boundaries of the surface areas of Class B, Class C, Class D, or Class E airspace designated for an airport;
- (d) Within 4 nautical miles of the center line of any Federal airway;
- (e) Below an altitude of 1,500 feet above the surface; or
- (f) When flight visibility is less than 3 statute miles.

For the purposes of this section, aerobatic flight means an intentional maneuver involving an abrupt change in an aircraft's attitude, an abnormal attitude, or abnormal acceleration, not necessary for normal flight.

[Doc. No. 18834, 54 FR 34308, Aug. 18, 1989, as amended by Amdt. 91-227, 56 FR 65661, Dec. 17, 1991]

## $\S 91.305$ Flight test areas.

No person may flight test an aircraft except over open water, or sparsely populated areas, having light air traffic.

## §91.307 Parachutes and parachuting.

- (a) No pilot of a civil aircraft may allow a parachute that is available for emergency use to be carried in that aircraft unless it is an approved type and—
- (1) If a chair type (canopy in back), it has been packed by a certificated and appropriately rated parachute rigger within the preceding 120 days; or
- (2) If any other type, it has been packed by a certificated and appropriately rated parachute rigger—